

REDHILL AERODROME R/T PROCEDURES (Outbound)

For **Fuel**:

“Redhill Tower G-_____ request taxi fuel”.

For **Circuits** – first call:

“Redhill Tower G-_____ outbound, Information (letter) QNH (xxxx)

(ATC-Pass your message)

“G-_____ (Type) (xx) PoB at (Redhill Aviation / Fuel), request taxi circuits)” {Do NOT include SSR 3767}.

For **Local** – first call:

“Redhill Tower G-_____) outbound, Information (letter) QNH (xxxx)

(ATC-Pass your message)

“G-_____ (Type) (xx) PoB at (Redhill Aviation/Fuel), request taxi local East / West” {Do NOT include SSR 3767}.

For **Land Away** – first call:

“Redhill Tower G-_____ outbound, Information (letter) QNH (xxxx)

(ATC-Pass your message)

“G-_____ (Type) (xx) PoB at (Redhill Aviation / Fuel), request taxi local (destination name)” {Do NOT include SSR 3767}.

REDHILL AERODROME R/T PROCEDURES (Inbound)

Rejoin from local flight - first call:

“Redhill Tower G-_____ re-joining from (East / West) Information (letter) QNH (xxxx) {Do not include SSR 3767}

(Read joining clearance back).

Inbound from a land away - first call:

“Redhill Tower G-_____ inbound, Information (letter) QNH (xxxx) {Do not include SSR}

(ATC-Pass your message)

“G-_____ (Type) (xx) PoB Departed (xxxx) {Do not include SSR 3767}

(Read joining clearance back).
